

Fitting your Aluminium Blinds

What you will need.

1. Tape Measure and pencil
2. Appropriate Screws & Wall Anchors depending on what you are fixing too (not provided)
3. Cordless Drill / Screwdriver

<p>Instructions for Reveal Fit</p> <p>Step 1</p> <p>Screw the back screw into place. The bracket should be about 110mm from the end of the blind at each end and if the size of the blind permits intermediate brackets will be supplied.</p> <p>NB: Make sure you don't mount the installation bracket where the blind ladder drum sits in the headbox.</p>	
<p>Step 2</p> <p>Fasten the front screw into place.</p> <p>2 screws are advisable per bracket.</p>	
<p>Step 3</p> <p>Installation Brackets installed ready for the blind. This opening is only 1000mm. Greater openings may require more intermediate brackets. (If so they will be supplied)</p>	

Fitting your Aluminium Blinds (page 2)

Step 4

Pull the cords until the blind is closed tight on the floor. This will enable you to install the blind without getting tangled in the cords.



Step 5

Clip the front edge of the head rail on to the front of the installation brackets metal edge. (not clear plastic)



Step 6

Push Upwards towards the back edge and "click" the blind into the bracket. The blind will sit square.



Fitting your Aluminium Blinds (page 3)

Step 7

Once clipped into place slowly lower the blind.



Step 8

Screw the clear bottom clips in place.


Clip the end of the bottom rail into the clear bottom clips. These hold the blinds in place. These are optional.



Step 9

Removal of the blinds. Take a flat head screw driver and insert into the clear plastic lug (as shown) on the installation bracket.

Pull gently outwards. This will release the clips and the blind will let go. Make sure you support the blind near the clip. Do the same to each installation bracket.

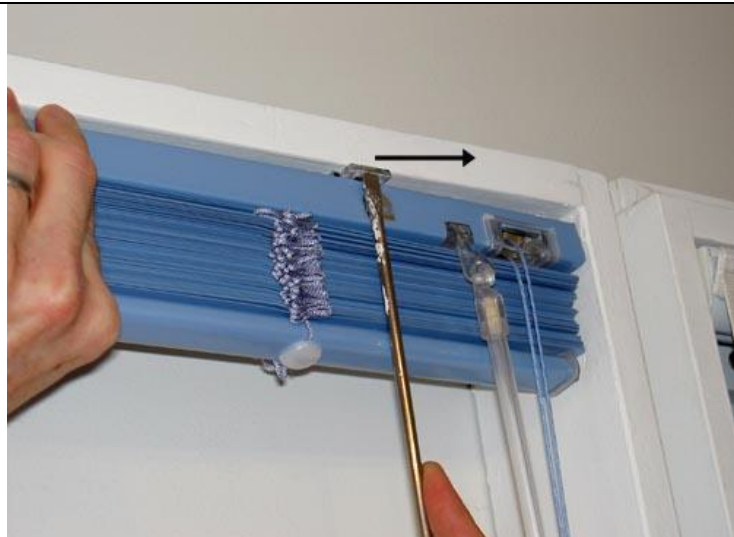

Fitting your Aluminium Blinds (page 4)



These instructions are also available in colour on our web site.

www.imageblindsdirect.com.au/instructions/